

Operating Instructions
Turbomat TM 150 - 250



Translation of the original German operating instructions for the operator

Read and follow the instructions and safety information!

Technical changes, typographical errors and omissions reserved!

B0310815_en | Edition 28/04/2015



Contents

1	General	5
1.1	Product overview	6
2	Safety	9
2.1	Hazard levels of warnings	9
2.2	Pictograms used	10
2.3	General safety information	11
2.4	Permitted uses	12
2.4.1	Permitted fuels	12
	<i>Wood chips</i>	12
	<i>Wood pellets</i>	13
	<i>Wood shavings</i>	13
	<i>Miscanthus</i>	13
	<i>Changing the fuel</i>	14
2.4.2	Non-permitted fuels	14
2.4.3	Qualification of operating staff	15
2.4.4	Protective equipment for operating staff	15
2.5	Design information	16
2.5.1	Installation and approval of the heating system	16
2.5.2	General information for installation room (boiler room)	16
2.5.3	Requirements for central heating water	17
2.5.4	Return lift	17
2.5.5	Use with storage tank	18
2.5.6	Chimney connection/chimney system	18
2.6	Safety devices	19
2.6.1	External safety devices	20
2.7	Residual risks	21
2.8	Emergency procedure	23
2.8.1	Overheating of the system	23
2.8.2	Smell of flue gas	23
2.8.3	Fire in the system	24
3	Operating the system	25
3.1	Assembly and initial startup	25
3.2	Filling the store space with fuel	26
3.2.1	Loading of fuel for a partially emptied store with rotary agitator	27
3.2.2	Loading fuel in an empty store space with a rotary agitator	27
	<i>Rotary agitator with combined drive system</i>	28
	<i>Rotary agitator with separate drive system (optional)</i>	28
3.2.3	Blowing in fuel for a partially emptied store with rotary agitator	29
3.2.4	Blowing in fuel for an empty store with rotary agitator	29
	<i>Rotary agitator with combined drive system</i>	30
	<i>Rotary agitator with separate drive system (optional)</i>	31
3.2.5	Blowing in pellets for a store with pellet screw	31
3.2.6	Loading fuel in a store space with a sliding floor discharge unit	31
3.2.7	Loading fuel in a store space with a horizontal screw discharge unit	32
3.2.8	Loading fuel in a store space with an inclined screw discharge unit	32
3.3	Heating up the boiler	32

3.3.1	Switching on the power supply	32
3.3.2	Switching on the boiler	32
3.3.3	Controlling the boiler	33
3.3.4	Switching off the boiler	33
3.3.5	Switching off the power supply	33
4	Servicing	34
4.1	General information on servicing	34
4.2	Inspection	36
4.2.1	Checking the system pressure	36
4.2.2	Checking the thermal discharge safety device	36
4.2.3	Checking the safety valve	36
4.2.4	Checking the geared motors	36
4.2.5	General visual inspection	37
4.3	Cleaning	37
4.3.1	Emptying the combustion chamber ash container	38
4.3.2	Emptying the ash container	39
	<i>Heat exchanger with ash screws</i>	39
	<i>For heat exchanger with ashcan</i>	40
4.3.3	Cleaning the combustion and burning chamber	41
	<i>Cleaning the burning chamber</i>	42
	<i>Cleaning the combustion chamber</i>	42
4.4	Periodic inspection and cleaning	44
4.5	Periodic inspection and cleaning (approx. 1,000 hrs)	45
4.5.1	Cleaning the ash from the heat exchanger	45
	<i>Heat exchanger with ash screws</i>	45
	<i>For heat exchanger with ashcan</i>	46
4.5.2	Clean the broadband probe	47
4.5.3	Cleaning the flue gas temperature sensor	47
4.5.4	Cleaning the heat exchanger	48
4.5.5	Cleaning the flue gas recirculation (FGR) duct (optional)	48
4.5.6	Cleaning the area under the moving grate	49
4.6	Periodic inspection and cleaning (approx. 3,000 hrs)	50
4.6.1	Setting and checking the seal on the combustion chamber doors	51
	<i>Checking the settings of the door stop</i>	51
	<i>Checking the settings of the door handle</i>	52
	<i>Checking the door stop seal</i>	52
	<i>Checking the door handle seal</i>	52
4.6.2	Adjusting the combustion chamber doors	53
	<i>Door handles</i>	53
	<i>Door stop side</i>	53
4.6.3	Cleaning the fireclay elements	54
4.6.4	Cleaning the combustion air blower fan	55
4.6.5	Cleaning the induced draught fan	55
4.6.6	Cleaning the FGR blower fan (optional)	56
4.6.7	Checking the heat exchanger ash removal drive	57
4.6.8	Checking the underpressure controller	57
4.6.9	Checking the combustion chamber overpressure sensor	57
4.6.10	Lubricating the bearings	57
4.6.11	Checking the flue gas pipe	58
4.7	Maintenance instructions for hydraulic system	59
4.8	Emissions measurement by chimney sweep or regulatory body	60
4.9	Maintenance agreement / Customer service	60
4.10	Replacement parts	60

4.11	Disposal information	61
4.11.1	Disposal of the ash	61
4.11.2	Disposal of system components	61
5	Troubleshooting	62
5.1	General faults in the power supply	62
5.1.1	Behaviour of system after a power failure	62
5.2	Excessive temperature	62
5.3	Faults with fault message	63
5.3.1	Procedure for fault messages	63
5.3.2	Acknowledging a fault message	64
6	Appendix	65
6.1	Addresses	65
6.1.1	Address of manufacturer	65
6.1.2	Address of the installer	65

1 General

Thank you for choosing a quality product from Froling. The product features a state-of-the-art design and conforms to all currently applicable standards and testing guidelines.

Please read and observe the documentation provided and always keep it close to the system for reference. Observing the requirements and safety information in the documentation makes a significant contribution to safe, appropriate, environmentally friendly and economical operation of the system.

The constant further development of our products means that there may be minor differences from the pictures and content. If you discover any errors, please let us know: doku@froeling.com.


Subject to technical change.

Warranty and Guarantee Conditions


Our sale and delivery conditions will be applicable. These conditions have been made available to customers, and customers have been made aware of them at the time of order completion.

You can also find the guarantee conditions on the enclosed guarantee certificate.


1.1 Product overview

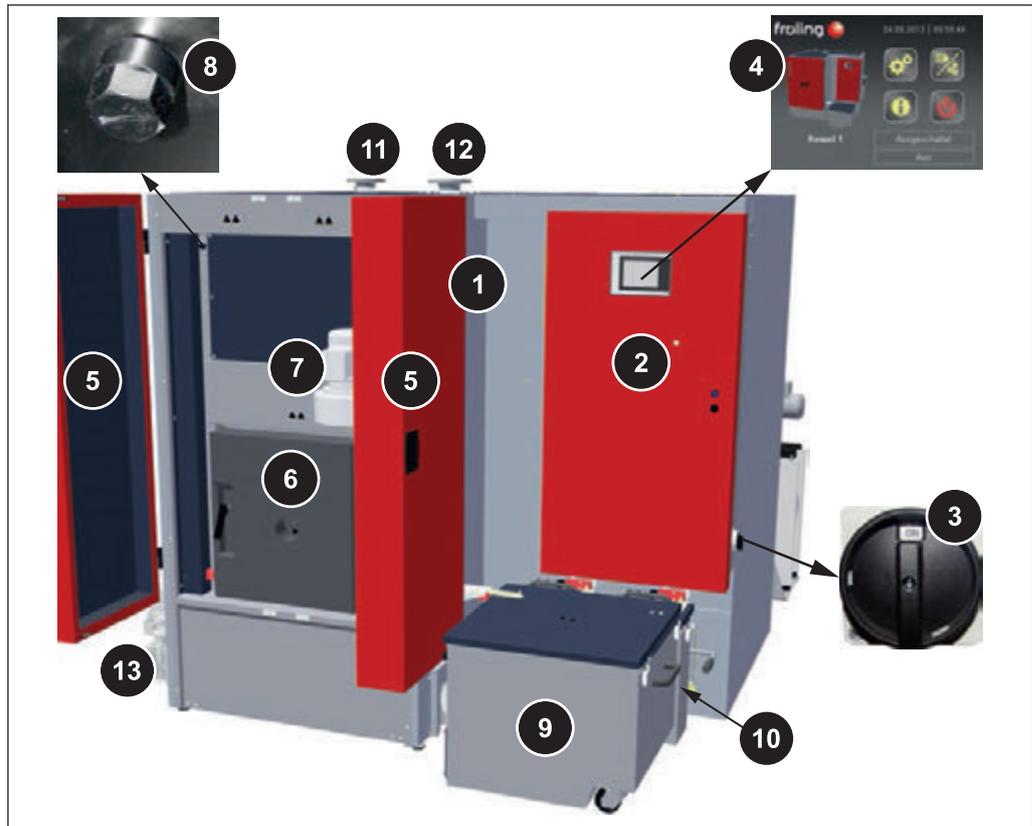

- | | |
|----|---|
| 1 | Wood chip boiler - Froling Turbomatic |
| 2 | Control cabinet with integrated controller |
| 3 | Main switch: switches the power supply on and off for the entire system |
| 4 | SPS 4000 control panel |
| 5 | Insulated doors |
| 6 | Combustion chamber door |
| 7 | Combustion air fan |
| 8 | High-limit thermostat (STL) |
| 9 | Combustion chamber ash container |
| 10 | Ash container (optional) or ashcan for heat exchanger (2) |
| 11 | Boiler flow connection |
| 12 | Boiler return connection |
| 13 | Drive for combustion chamber ash removal |

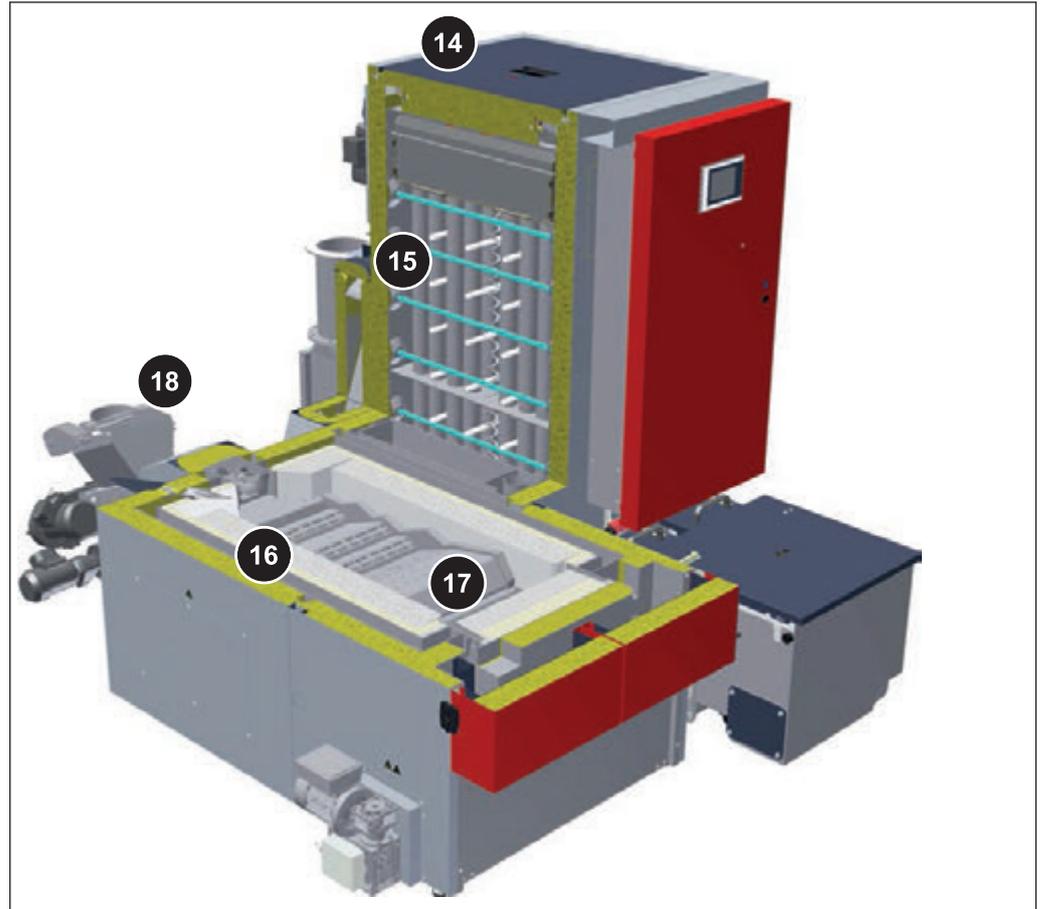

- 14 Insulating cover and heat exchanger cover
- 15 Efficiency Optimisation System (EOS) with turbulators
- 16 Fireclay elements (combustion chamber)
- 17 Moving grate
- 18 Stoker duct

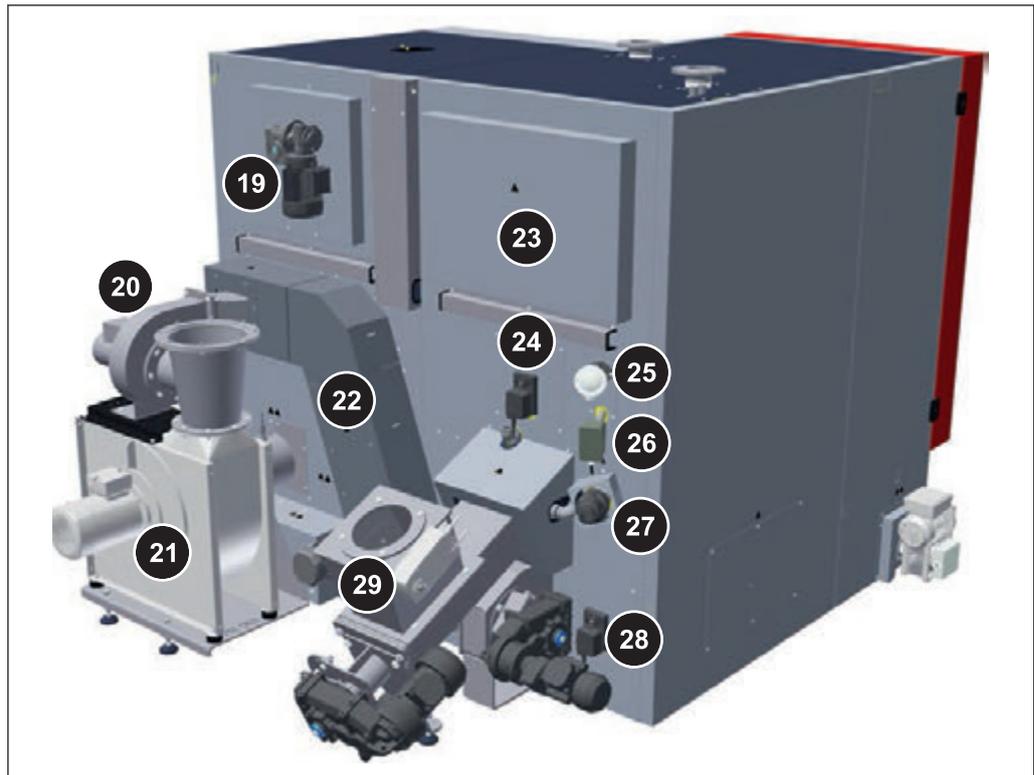

19	Drive for automatic heat exchanger cleaning
20	Flue gas recirculation (FGR) - optional
21	Induced draught fan
22	Flue gas recirculation (FGR) duct - optional
23	Insulating cover combustion chamber (behind: combustion chamber cleaning cover)
24	Secondary air servo-motor
25	Combustion chamber temperature sensor
26	Combustion chamber overpressure monitor
27	Automatic ignition
28	Primary air servo-motor
29	Burn back protection system (shown here: burn back flap; optional: rotary valve)

2 Safety

2.1 Hazard levels of warnings

This documentation uses warnings with the following hazard levels to indicate direct hazards and important safety instructions:

DANGER

The dangerous situation is imminent and if measures are not observed it will lead to serious injury or death. You must follow the instructions!

WARNING

The dangerous situation may occur and if measures are not observed it will lead to serious injury or death. Work with extreme care.

CAUTION

The dangerous situation may occur and if measures are not observed it will lead to minor injuries or damage to property.

2.2 Pictograms used

The following symbols are used in the documentation and/or on the boiler to show what is required and forbidden and to give warnings.

In accordance with the Machinery Directive, signs fitted directly within the danger area of the boiler indicate immediate hazards or safety procedures. These stickers must not be removed or covered.

	Refer to the operating instructions		Wear safety shoes
	Always wear protective gloves		Wear hearing protection
	Keep the doors closed		Turn off the main switch
	Unauthorised access prohibited		No not walk on the surface
	Warning - hot surface		Warning - hazardous electrical voltage
	Warning - hazardous or irritant materials		Warning - automatic boiler startup
	Hand injury warning		Warning of injury to fingers or hands, automatic fan
	Cutting injury warning		Warning of injury to fingers or hands, automatic screw

2.3 General safety information



DANGER

If the device is used incorrectly:

Incorrect use of the system can cause severe injury and damage.

When operating the system:

- Observe the instructions and information in the manuals.
- Observe the details on procedures for operation, maintenance and cleaning, as well as troubleshooting in the individual manuals.
- Any work above and beyond this should be carried out by authorised heating engineers or by Froling customer services.



WARNING

External influences:

Negative external influences, such as insufficient combustion air or non-standard fuel, can cause serious faults in combustion (e.g. spontaneous combustion of carbonisation gases or flash fires) which can in turn cause serious accidents!

When operating the boiler, please note the following:

- Instructions and information regarding versions and minimum values, as well as standards and guidelines for heating components in the instructions must be observed.

WARNING

Severe injuries and damage can be caused by an inadequate flue gas system.

Problems with the flue gas system, such as poor cleaning of the flue pipe or insufficient chimney draught, can cause serious faults in combustion (such as spontaneous combustion of carbonisation gases or flash fires).

Take the following precautions:

- Optimum boiler performance can only be guaranteed if the flue gas system is functioning correctly.

2.4 Permitted uses

The Froling Turbomat TM is designed exclusively for heating domestic water. Only use fuels specified in the "Permitted fuels" section.

⇒ See "Permitted fuels" [page 12]

The unit should only be operated when it is in full working order. It must be operated in accordance with the instructions, observing safety precautions, and you should ensure you are aware of the potential hazards. The inspection and cleaning intervals in the operating instructions must be observed. Ensure that any faults which might impair safety are rectified immediately.

The manufacturer or supplier is not liable for any damage resulting from non-permitted uses.

Only original spare parts or specific alternative spare parts authorised by the manufacturer may be used. Any kind of change or modification made to the product will invalidate its manufacturer's CE conformity. In such cases, the product will need to undergo new hazard evaluation procedures by the operator. The operator will then be fully responsible for the declaration of conformity according to the valid guideline(s) for the product and will need to attach the new CE label to the device. This person will then assume all of the rights and responsibilities of a manufacturer.

2.4.1 Permitted fuels

Wood chips

Criterion	ÖNORM M 7133	EN ISO 17225	Description as per ÖNORM M 7133
Water content	W20	M20	air-dried
	W30	M30	suitable for storage
	W35	-	limited suitability for storage
	W40 ¹⁾	M40	high-moisture wood chips
Size	G30	P16S	Fine wood chip
	G50	P31S	Medium-sized wood chip
1. partial load conditions only to a limited extent			

NOTICE! In case of operating under partial load conditions and fuels with a water content of >W35, power consumption of less than 65% of the nominal output is not permitted!

Note on standards

EU: Fuel as per EN 17225 – Part 4: Wood chips class A1 / P16S-P31S

Additional for Germany: Fuel class 4 (§3 of the First Federal Emissions Protection Ordinance (BimSchV) - applicable version)

Wood pellets

Wood pellets made from natural wood with a diameter of 6 mm

Note on standards

EU:	Fuel acc. to EN ISO 17225 - Part 2: Wood pellets class A1 / D06
and/or:	EN <i>plus</i> / DIN <i>plus</i> certification scheme

General note:

Before refilling the store, check for pellet dust and clean if necessary.

Wood shavings

Wood shavings generally cause problems with combustion. Therefore their use is permitted only with authorisation from Froling. The following additional points also apply:

- Sawdust and carpentry waste should only be used with systems with a rotary valve.
- The store should be fitted with a pressure release device in accordance with regional regulations.
- The same limits apply for the permitted water content of sawdust as for wood chips.

NOTICE

For fuels with a water content < W30 the boiler's rated heat output can only be guaranteed if it is used with a flue gas recirculation system (FGR).

Miscanthus

Switchgrass or elephant grass (Latin name: miscanthus) is a C4 plant. Standards and regulations for burning these plants have not been standardised, so the following applies:

NOTICE! The regional regulations for burning miscanthus should be observed. Operation may only be possible by special permit.

Changing the fuel

CAUTION

Incorrect fuel parameter settings:

Incorrect parameter settings have a significant adverse effect on the functioning of the boiler, and as a result this will invalidate the guarantee.

Therefore:

- If the fuel is changed (e.g. from wood chips to pellets), the system must be reset by Froling customer services.

2.4.2 Non-permitted fuels

The use of fuels not defined in the "Permitted fuels" section, and particularly the burning of refuse, is not permitted.

CAUTION

In case of use of non-permitted fuels:

Burning non-permitted fuels increases the cleaning requirements and leads to a build-up of aggressive sedimentation and condensation, which can damage the boiler and also invalidates the guarantee. Using non-standard fuels can also lead to serious problems with combustion.

For this reason, when operating the boiler:

- Only use permitted fuels

2.4.3 Qualification of operating staff

CAUTION



If unauthorised persons enter the boiler room:

Risk of personal injury and damage to property

- The operator is responsible for keeping unauthorised persons, in particular children, away from the system.

Only trained operators are permitted to operate the unit. The operator must also have read and understood the instructions in the documentation.

2.4.4 Protective equipment for operating staff

You must ensure that staff have the protective equipment specified by accident prevention regulations.



- For inspection and cleaning:
 - suitable workwear
 - protective gloves
 - sturdy shoes



- Additional for operating:
 - Hearing protection (sound level > 70 dB)
 - Protective goggles

2.5 Design information

Carrying out modifications to the system and changing or deactivating safety equipment is prohibited.

Always comply with all fire, building, and electrical regulations when installing or operating the system, in addition to following the operating instructions and mandatory regulations that apply in the country in which the tank is operated.

2.5.1 Installation and approval of the heating system

The boiler should be operated in a closed heating system. The following standards govern the installation:

Note on standards

ÖNORM / DIN EN 12828 Heating Systems in Buildings

NOTICE! Each heating system must be officially approved.

The appropriate supervisory authority (inspection agency) must always be informed when installing or modifying a heating system, and authorisation must be obtained from the building authorities:

Austria: Inform the civic/municipal building authorities.

Germany: Notify an approved chimney sweep and the building authorities.

2.5.2 General information for installation room (boiler room)

Boiler room characteristics

- There must not be a potentially explosive atmosphere in the boiler room as the boiler is not suitable for use in potentially explosive environments.
- The boiler room must be frost-free.
- The boiler does not provide any light, so the customer must provide sufficient lighting in the boiler room in accordance with national workplace design regulations.
- When using the boiler over 2000 metres above sea level you should consult the manufacturer.
- Danger of fire due to flammable materials.
No flammable materials should be stored near the boiler. Flammable objects (e.g. clothing) must not be put on the boiler to dry.
- Damage due to impurities in combustion air.
Do not use any solvents or cleaning agents containing chlorine in the room where the boiler is installed.
- Keep the air suction opening of the boiler free from dust.

Ventilation of the boiler room

Ventilation air for the boiler room should be taken from and expelled directly outside, and the openings and air ducts should be designed to prevent weather conditions (foliage, snowdrifts, etc.) from obstructing the air flow.

Unless otherwise specified in the applicable building regulations for the boiler room, the following standards apply to the design and dimensions of the air ducts:

Note on standards

ÖNORM H 5170 - Construction and fire protection requirements
TRVB H118 - Technical directives on fire protection/prevention

2.5.3 Requirements for central heating water

The following standards and guidelines apply:

Note on standards

Austria:	ÖNORM H 5195-1
Germany:	VDI 2035
Switzerland:	SWKI 97-1
Italy:	D.P.R. no. 412

NOTICE! Note on filling with make-up water: always bleed the filling hose before connecting, in order to prevent air from entering the system.

Observe the standards and also follow the recommendations below:

- Max. cumulative value for alkaline earth: 1.0 mmol/l or 100 mg/l (corresponds to 5.6 dH)
- Use softened water as the make-up water
- Avoid leaks and use a closed heating system to maintain water quality during operation

2.5.4 Return lift

If the hot water return is below the minimum return temperature, some of the hot water outfeed will be mixed in.

 **CAUTION**

Risk of dropping below dew point/condensation formation if operated without return temperature control.

Condensation water forms an aggressive condensate when combined with combustion residue, leading to damage to the boiler.

Take the following precautions:

- Regulations stipulate the use of a return temperature control.
 - ➔ The minimum return temperature is 65 °C. We recommend fitting some sort of control device (e.g. thermometer).

2.5.5 Use with storage tank

NOTICE

In principle it is not necessary to use a storage tank for the system to run smoothly. However, we recommend that you use the system with a storage tank, as this ensures a continuous supply of fuel in the ideal output range of the boiler.

For the correct dimensions of the storage tank and the line insulation (in accordance with ÖNORM M 7510 or guideline UZ37) please consult your installer or Froling.

⇒ See "Addresses" [page 65]

2.5.6 Chimney connection/chimney system

EN 303-5 specifies that the entire flue gas system must be designed to prevent, wherever possible, damage caused by seepage, insufficient feed pressure and condensation. Please note in this respect that flue gas temperatures lower than 160K above room temperature can occur in the permitted operating range of the boiler.

NOTICE! Please see the technical data contained in the assembly instructions for further information about standards and regulations as well as the flue gas temperatures when clean and the other flue gas values!

2.6 Safety devices



1 BOILER OFF (*switches off the boiler to prevent overheating*)

- Tap "Boiler off"
 - Automatic mode is switched off
 - Control system follows the boiler shutdown procedure
 - The pumps continue to run

NOTICE! Never use the main switch!

2 MAIN SWITCH (*switches off the power supply*)

Before carrying out work on the boiler:

- Tap "Boiler off"
 - Automatic mode is switched off
 - Control system follows the boiler shutdown procedure
- Switch off the main switch and let the boiler cool down

3 SAFETY OVERLOAD SWITCHES, MOTOR PROTECTION SWITCHES, RESIDUAL CURRENT PROTECTIVE DEVICES (RCD)

Switch off the related component in the event of fault currents or overloads.

4 SAFETY TEMPERATURE LIMITER (STL) (*protection against overheating*)

The STL switches off the combustion system when the boiler reaches 95 - 100°C. The pumps continue to run. Once the temperature falls to below approx. 85°C, the STL can be reset mechanically.

5 DOOR SWITCH

Switches the induced draught fan to full speed if the door is opened while the boiler is running and disconnects simultaneously the combustion air and FGR blower fan.

TA THERMAL DISCHARGE VALVE (*protection against overheating*)

The thermal discharge valve opens at approx. 100°C and feeds cold water to the safety heat exchanger to lower the boiler temperature

SAFETY VALVE (*not shown, supplied by the customer*)

When the boiler pressure reaches a maximum of 3 bar, the safety valve opens and the heated water is blown off in the form of steam.

2.6.1 External safety devices

**Safety cut-out switch for sliding floor hydraulic chamber**

Before starting any maintenance work in the hydraulic chamber of the sliding floor:

- Turn the safety cut-out switch to the "0" position
 - The boiler follows the shutdown procedure and the discharge system is deactivated
- Turning the selector switch past the "0" position engages the locking lever
 - The switch can be locked with a padlock to prevent it from being switched on again

On completion of the maintenance work:

- Remove the padlock
- Turn the selector switch past the "0" position to automatically release the locking switch. The selector switch can now be turned back to the "1" position.
- Acknowledge the fault and press the Start button to activate the boiler

2.7 Residual risks



WARNING

When touching hot surfaces:

Severe burns are possible on hot surfaces and the flue gas pipe!

When work is carried out on the boiler:

- Shut down the boiler in a controlled way (operating status "Switched off OFF") and allow it to cool down
- Protective gloves must generally be worn for work on the boiler, and it should only be operated using the handles provided
- Insulate the flue pipes or simply avoid touching them during operation.

WARNING

Opening the door to the combustion or burning chamber, or the cleaning door or lids during operation

may result in injury or damage or flue gas generation!

Therefore:

- do not open any doors or lids while the boiler is in operation!

WARNING

If non-permitted fuel types are used:

Non-standard fuels can cause serious faults in combustion (e.g. spontaneous combustion of carbonisation gases / flash fires) which can lead to serious accidents!

Take the following precautions:

- Only use fuels specified in the "Permitted fuels" section of these operating instructions.

 **WARNING**

Inspection and cleaning work on a system which is operational:

Risk of serious injuries from automatic startup of the system and severe burns from hot parts and the flue gas pipe!

When working on the system:

- always wear protective gloves
- only operate the boiler using the handles provided
- switch off the boiler by tapping “Boiler off” at the mode icon
 - The boiler follows the shutdown procedure and switches to “Switched off Off” status
- switch off the main switch and take precautions to prevent accidental switching on
- allow the boiler to cool off for at least 1 hour
- once all of the tasks have been completed, turn the main switch back on and switch the boiler on in the desired mode

2.8 Emergency procedure

2.8.1 Overheating of the system

If the system overheats and the safety devices fail, proceed as follows:

NOTICE! Do not under any circumstances switch off the main switch or disconnect the power supply.

- Keep all the doors on the boiler closed
- Open all mixing valve taps, switch on all pumps.
 - ➔ The Froling heating circuit control performs this function in automatic operation.
- If a third-party controller is used, carry out the appropriate measures to activate the mixer taps and pumps manually.
- Leave the boiler room and close the door
- Increase heat consumption by turning on all radiators and other appliances
- Open any available radiator thermostat valves

If the temperature does not drop:

- Contact the installer or Froling customer services
 - ⇒ See "Addresses" [page 65]

2.8.2 Smell of flue gas



DANGER



If you smell flue gas in the boiler room:

Inhaling toxic flue gas can be fatal!

If you smell flue gas in the room where the boiler is installed:

- Keep all the doors on the boiler closed
- Shut down the boiler according to procedure
- Ventilate the room where the boiler is installed
- Close the fire door and doors to living areas

2.8.3 Fire in the system



DANGER

In case of fire in the system:

Risk of death by fire and poisonous gases

Emergency procedure in case of fire:

- Leave the boiler room
- Close the doors
- Inform the fire department

3 Operating the system

3.1 Assembly and initial startup

Assembly, installation and initial startup of the boiler must only be carried out by qualified staff, and these procedures are described in the accompanying assembly instructions.

NOTICE! See assembly instructions for the Turbomat TM

NOTICE

Optimum efficiency and efficient, low-emission operation can only be guaranteed if the system is set up by trained professionals and the standard factory settings are observed.

Take the following precautions:

- Initial startup should be carried out with an authorised installer or with Froling customer services

The individual steps for initial start-up are explained in the operating instructions for the controller

NOTICE! See operating instructions for the SPS 4000

The customer is responsible for ensuring the following prior to initial start-up of the system by Froling customer services:

- Electrical installation
- Installation of water pipes
- Flue gas connection including all insulation work
- Work must comply with local fire protection regulations

- The operator must ensure that at least 50% of the boiler's rated heat output can be extracted from the network on commissioning.
- The necessary "dry run" of the system means that the discharge system must be empty at the start of initial startup. Fuel must be available, however, so that the discharge system can be filled once the system is released.
- When heating up the boiler for the first time to dry out the fireclay concrete, the customer must provide approx. 1 m³ of dry firewood.
- It is essential that the electrician who has carried out the installation work is available when starting up the system for the first time to make any changes to the wiring which may become necessary.
- During initial start-up, operating staff are shown how to use the boiler. It is imperative for proper handover of the product that those involved are present as this is a one-off opportunity.

NOTICE

If condensation escapes during the initial heat-up phase, this does not indicate a fault.

- Tip: If this occurs, clean up using a cleaning rag.

3.2 Filling the store space with fuel

Note the following when loading the machine with fuel:

- only use permitted fuels!
⇒ See "Permitted fuels" [page 12]
- remove foreign bodies in the store space before filling

NOTICE! Systems in which the fuel is delivered by tanker and is blown into the store space must be fitted with a rotary valve.

⚠ CAUTION

Entering the store space when the system is switched on

Risk of injury due to automatic startup of system, particularly the discharge system!

Therefore, before entering the fuel store space:

- switch off the boiler by tapping "Boiler off" at the mode icon
 - The boiler follows the shutdown procedure and switches to "Switched off Off" status
- turn off the boiler's main switch
- turn off the main switch on the expansion switch cabinet (if installed)

For blowing in fuel the following precautions also apply:

⚠ CAUTION


Blowing in fuel when the boiler is switched on:

The negative pressure resulting from blowing in fuel can lead to smoke being sucked back into the store if the boiler is operational. Possible excess pressure could cause smoke to escape into the installation room, possibly resulting in injury and damage!

Therefore, before blowing in the fuel:

- switch off the boiler by tapping "Boiler off" at the mode icon
 - The boiler follows the shutdown procedure and switches to "Switched off Off" status
- leave to cool for **at least two hours** in "Switched off Off" mode.


3.2.1 Loading of fuel for a partially emptied store with rotary agitator

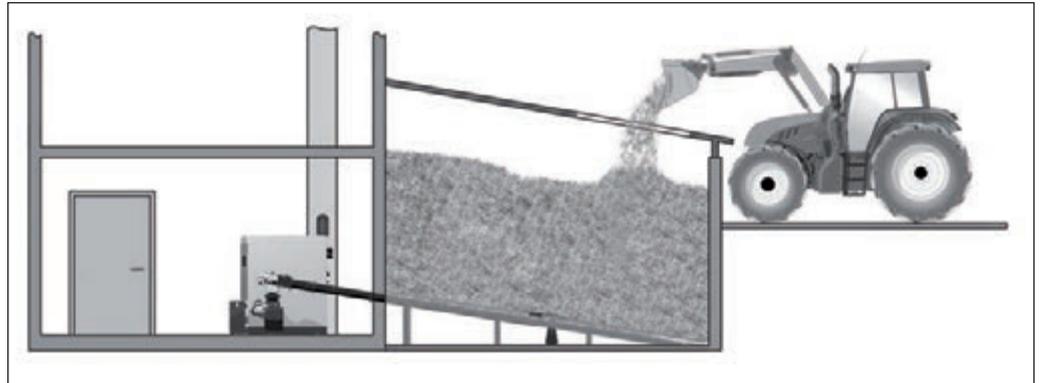

If there is still sufficient fuel in the store (the head of the rotary agitator is completely covered with fuel and the rotary agitator arms are not extended), the store can be filled:

- Load the fuel at the filling opening

3.2.2 Loading fuel in an empty store space with a rotary agitator

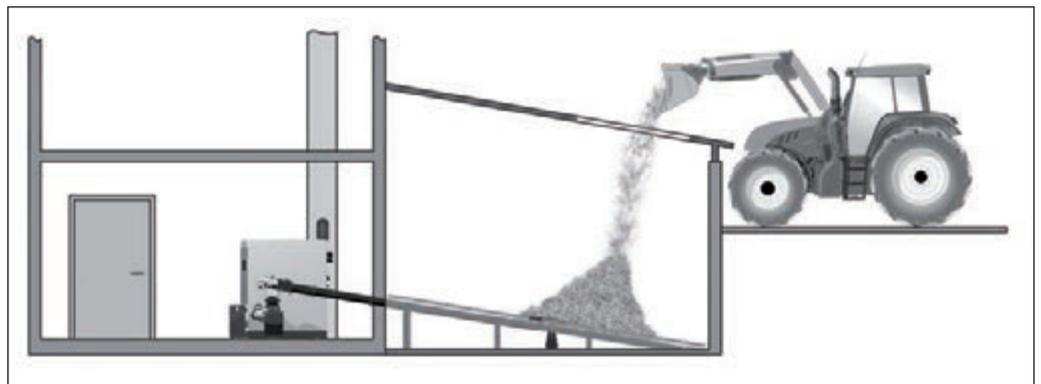

NOTICE

Filling an empty store space with a rotary agitator:

With the store space completely empty or almost empty, the rotary agitator arms / spring blades are fully extended. If the rotary agitator arms / spring blades are covered in this position with a large amount of fuel, the weight of the fuel will stop them from working properly.

Therefore, when filling an empty store space or when the rotary agitator arms are extended:

- First of all place a small amount of fuel (approx. 2 – 3 m³) on and around the head of the rotary agitator
- Only add the rest of the fuel once the rotary agitator arms are back on the head of the rotary agitator
- It is important you follow the procedure given below!

- Switch off the boiler by tapping “Boiler off” at the mode icon and allow to cool for at least two hours
- Disconnect the boiler’s main switch
- Turn off the main switch on the expansion switch cabinet (if installed)

- Pile up the residual fuel (in the corners and on the walls) in the fuel store on and around the head of the rotary agitator and on the discharge screw by hand.
 - The head of the rotary agitator should be completely covered.
- Follow the instructions on working in the fuel store!

NOTICE! Refer to the notice (supplied with the boiler) at the entrance to the store



If the head of the rotary agitator is not adequately covered by the remaining fuel:

- Load a small amount of fuel (approx. 2-3 m³)
 - Pile it up on and around the head of the rotary agitator
 - The head of the rotary agitator should be completely covered

Rotary agitator with combined drive system

After working in the store:

- Turn on the boiler’s main switch
- Turn on the main switch on the expansion switch cabinet (if installed)
- Switch on the boiler by tapping “Boiler on” at the mode icon

- For the highest possible heat consumption
 - the storage tank must be able to store enough heat
- Wait until the rotary agitator arms / spring blades are touching the head of the rotary agitator (approx. 2 revolutions)
- Add the rest of the fuel


Rotary agitator with separate drive system (optional)

In the case of rotary agitators with a separate drive system, the head of the rotary agitator can be operated separately from the discharge screw.


After working in the store:

- Turn on the boiler’s main switch
- Turn on the main switch on the expansion switch cabinet (if installed)

- Tap “Manual” in “Bunker filling rotary agitator” during manual operation
 - The rotary agitator runs for approx. 3 minutes
- Wait until the rotary agitator arms / spring blades are touching the head of the rotary agitator (approx. 2 revolutions)
- Add the rest of the fuel

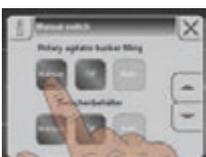


3.2.3 Blowing in fuel for a partially emptied store with rotary agitator

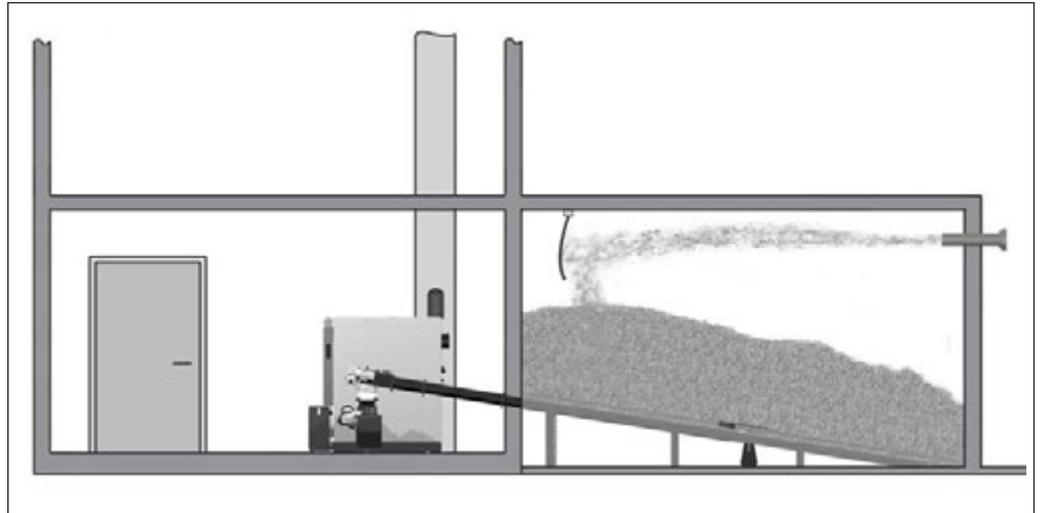

If there is still sufficient fuel in the store (the head of the rotary agitator is completely covered with fuel and the rotary agitator arms are not extended), the store can be filled as follows:

- Switch off the boiler by tapping “Boiler off” at the mode icon and allow to cool for at least two hours
- Close all openings to the store to seal out dust
- Blow the fuel into the store

3.2.4 Blowing in fuel for an empty store with rotary agitator

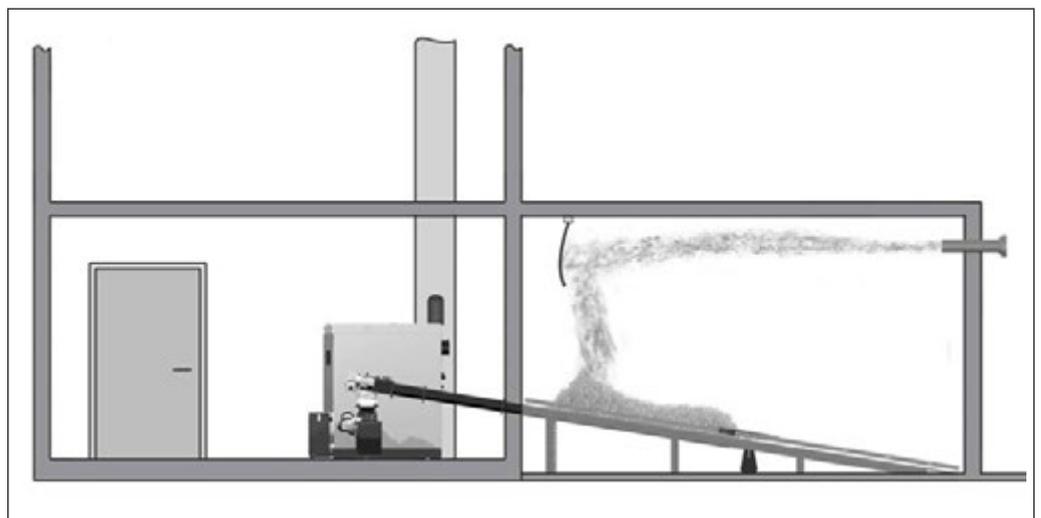

NOTICE

Filling an empty store space with a rotary agitator:

With the store space completely empty or almost empty, the rotary agitator arms / spring blades are fully extended. If the rotary agitator arms / spring blades are covered in this position with a large amount of fuel, the weight of the fuel will stop them from working properly.

Therefore, when filling an empty store space or when the rotary agitator arms are extended:

- First of all place a small amount of fuel (approx. 2 – 3 m³) on and around the head of the rotary agitator
 - Only add the rest of the fuel once the rotary agitator arms are back on the head of the rotary agitator
 - It is important you follow the procedure given below!
-
- Switch off the boiler by tapping “Boiler off” at the mode icon and allow to cool for at least two hours
 - Disconnect the boiler’s main switch
 - Turn off the main switch on the expansion switch cabinet (if installed)
 - Pile up the residual fuel (in the corners and on the walls) in the fuel store on and around the head of the rotary agitator and on the discharge screw by hand.
 - The head of the rotary agitator should be completely covered.
 - Follow the instructions on working in the fuel store!

NOTICE! Refer to the notice (supplied with the boiler) at the entrance to the store

If the head of the rotary agitator is not adequately covered by the remaining fuel:

- Close all openings to the store to seal out dust
- Load a small amount of fuel (approx. 2-3 m³)
 - Pile it up on and around the head of the rotary agitator
 - The head of the rotary agitator should be completely covered



Rotary agitator with combined drive system

After working in the store:


- Turn on the boiler’s main switch
- Turn on the main switch on the expansion switch cabinet (if installed)
- Switch on the boiler by tapping “Boiler on” at the mode icon
- For the highest possible heat consumption
 - the storage tank must be able to store enough heat
- Wait until the rotary agitator arms / spring blades are touching the head of the rotary agitator (approx. 2 revolutions)
- Switch off the boiler by tapping “Boiler off” at the mode icon and allow to cool for at least two hours
- Close all openings to the store to seal out dust
- Add the rest of the fuel

Rotary agitator with separate drive system (optional)

In the case of rotary agitators with a separate drive system, the head of the rotary agitator can be operated separately from the discharge screw.

After working in the store:

- Turn on the boiler's main switch
- Turn on the main switch on the expansion switch cabinet (if installed)
- Tap "Manual" in "Bunker filling rotary agitator" during manual operation
 - ➔ The rotary agitator runs for approx. 3 minutes
- Wait until the rotary agitator arms / spring blades are touching the head of the rotary agitator (approx. 2 revolutions)
- Close all openings to the store to seal out dust
- Add the rest of the fuel

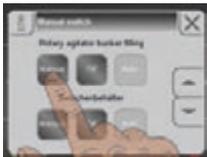**3.2.5 Blowing in pellets for a store with pellet screw**

- Switch off the boiler by tapping "Boiler off" at the mode icon and allow to cool for at least two hours
- Close all openings to the store to seal out dust
- Blow the fuel into the store

3.2.6 Loading fuel in a store space with a sliding floor discharge unit

- The maximum dumping height (depending on the fuel density) as specified in the operating instructions for the sliding floor must not be exceeded.
- Driving over the fuel in the store can cause the material to be compacted.
 - ➔ This may stop the slide rods from running smoothly.

Filling the store by driving over the slide rods

Slide rods can be driven over, provided the following precautions are taken:

- The slide rods must be covered by a residual fuel layer approx. 30 cm deep so that the truck does not drive directly over the sliding floor keyways.
- On no account may the truck drive over the longitudinal support for the slide rods. (Provide guidance systems for driving the truck into the store, or position gates appropriately)
- While the truck is on the sliding floor, the hydraulic unit must be switched off
- While it is on the sliding floor the truck should be manoeuvred as little as possible

Filling the store by tipping fuel onto or next to the slide rods

- If the fuel can be tipped out without driving over the slide rods, the store can be filled while the boiler is running

3.2.7 Loading fuel in a store space with a horizontal screw discharge unit

- When the boiler system is running, fuel can be tipped into the store at any time.
 - CAUTION: fuel may only be blown in if the pressure conditions in the store are suitable and the water content of the fuel does not exceed a maximum of W30.

3.2.8 Loading fuel in a store space with an inclined screw discharge unit

The inclined screw must always be moved into an upright position in order to fill the store.

This can be done as follows:

- If the store is filled while the boiler system is running, the screw moves automatically into an upright position.
 - If the store is empty, the screw must be moved by hand into an upright position and wedged with fuel.
- If the feed system is not running when the store is filled, the screw can be held upright using string.
 - TIP: the string should be thin enough for it to break as the store is filled.

3.3 Heating up the boiler

NOTICE

Do not modify the factory settings!


Changing the system's factory settings can be detrimental to efficiency and emissions of the system.

3.3.1 Switching on the power supply



- Turn on the main switch
 - There is voltage at all of the boiler's components
 - When the control has completed the system start, the boiler is ready for operation

3.3.2 Switching on the boiler

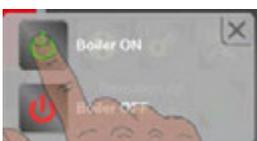

- Switch the boiler on by tapping "Boiler ON"
 - Automatic mode is active
 - The heating system is controlled via the controller according to the selected mode in automatic mode
- For other modes press the relevant function key

- Information on function keys in the relevant operating instructions for the "SPS 4000" boiler controller

3.3.3 Controlling the boiler

Please see the relevant operating instructions for the "SPS 4000" boiler controller for the necessary control steps, as well as displaying and modifying parameters

3.3.4 Switching off the boiler



- Switch boiler off by tapping "Boiler OFF"
 - The boiler follows the shutdown program and switches to "Switched off Off" status
 - The combustion unit is switched off, the chamber discharge unit and the entire hydraulic system remain active

3.3.5 Switching off the power supply

WARNING

When turning off the main switch in automatic mode:
Serious combustion faults leading to serious accidents are possible.

Before turning off the main switch:

- Switch boiler off by tapping "Boiler OFF"
 - The boiler follows the shutdown procedure and switches to "Switched off OFF" status after the cleaning cycle



- Turn off the main switch
 - Boiler controller is switched off
 - The components powered via the control cabinet are powered down
 - CAUTION: the expansion switch cabinet, which has its own power supply, is still live.

NOTICE! Frost protection function is no longer active!

4 Servicing

4.1 General information on servicing



DANGER

When working on electrical components:

Risk of electrocution!

When work is carried out on electrical components:

- Only have work carried out by a qualified electrician
- Observe the applicable standards and regulations
 - Work must not be carried out on electrical components by unauthorised persons



WARNING

Inspection and cleaning work on a system which is operational:

Risk of serious injuries from automatic startup of the system and severe burns from hot parts and the flue gas pipe!

When working on the system:

- always wear protective gloves
- only operate the boiler using the handles provided
- switch off the boiler by tapping "Boiler off" at the mode icon
 - The boiler follows the shutdown procedure and switches to "Switched off Off" status
- switch off the main switch and take precautions to prevent accidental switching on
- allow the boiler to cool off for at least 1 hour
- once all of the tasks have been completed, turn the main switch back on and switch the boiler on in the desired mode



WARNING

Incorrect inspection and cleaning:

Incorrect or insufficient inspection and cleaning of the boiler can cause serious faults in combustion (e.g. spontaneous combustion of carbonisation gases / flash fires) and this can lead to serious accidents and damage!

Take the following precautions:

- Clean the boiler following the instructions in the instruction manual. Follow the boiler operating instructions.

NOTICE

We recommend that you keep a maintenance book in accordance with ÖNORM M7510 of the Technical Directive for Fire Prevention (TRVB)

NOTICE

As well as the cleaning and maintenance tasks explained in these instructions, also refer to the specifications according to TRVB H 118 given in the enclosed inspection book.

NOTICE! The boiler must be cleaned and inspected at appropriate intervals depending on the service hours and fuel quality.

Cleaning kit provided:

- Chamber plate (triangular plate)
- Flat scraper
- Brush (Ø 53 mm)

- Regular cleaning of the boiler extends its life and is a basic requirement for smooth running.
- Recommendation: use an ash vacuum for cleaning.

4.2 Inspection

4.2.1 Checking the system pressure



- Check the system pressure on the pressure gauge
 - The value must be 20% above the pre-stressed pressure of the expansion tank
- NOTICE! Check that the position of the pressure gauge and rated pressure of the expansion tank match your installer's specifications!**

If the system pressure decreases:

- Top up with water
 - NOTICE! If this happens frequently, the seal of the heating system is faulty! Inform your installer**

If large pressure fluctuations are observed:

- Ask an expert to inspect the expansion tank

4.2.2 Checking the thermal discharge safety device



- Check the seal of the discharge valve
 - The discharge pipe must not drip
- NOTICE! Exception: Boiler temperature > 100 °C**

If water is dripping from the discharge pipe:

- Clean the discharge safety device in accordance with the manufacturer's instructions or have it checked/replaced by the installer if necessary

4.2.3 Checking the safety valve



- Check the seal of the safety valve regularly and ensure that the valve is not dirty
- NOTICE! Inspection work must be carried out in accordance with the manufacturer's instructions.**

4.2.4 Checking the geared motors

- Carry out a visual inspection of the seal on the geared motors in the system
 - There should be no significant leakage of lubricant
- NOTICE! The presence of a few drops of lubricant may be normal. If there is significant loss of lubricant, inform your installer or Froling customer services**

4.2.5 General visual inspection

Regular general visual and functional inspections should be carried out on all the components making up the boiler.

- Clean components wherever necessary
- Immediately change or have someone exchange defective components

Pay particular attention to the following components when carrying out the inspections:

- Combustion chamber
- Burning chamber
- Heat exchanger
- ID fan
- Flue gas recirculation (FGR)
- Combustion air fan
- Burn back flap
 - Check function and seal
- Screw drives
 - Loading and ash removal
- Door switch
 - When the door is opened, the induced draught unit must operate at full speed
 - The combustion air and FGR blower fan must stop when the door is opened
- Igniter tube
 - must not be obstructed!
- Safety temperature limiter (STL)
- Loading system water sprinkler system
 - Note the manufacturer's specifications
- Emergency stop switch

4.3 Cleaning

The frequency at which the following cleaning work is carried out depends on energy requirements, fuel quality and number of operating hours.

WARNING

When removing the ash container cover during operation:

False air infiltration via the ash screw duct can lead to uncontrolled combustion and the risk of accidents.


Before checking the ash level / emptying the ash container:

- Switch off the boiler by tapping "Boiler off"
 - ➔ The boiler follows the shutdown procedure and switches to "Switched off OFF" status.

4.3.1 Emptying the combustion chamber ash container

NOTICE! The current fill level of the combustion chamber ash container can also be checked while the boiler is in operation. Important:

- the ash container cover must be closed again within 15 seconds
- Caution: if the cover remains open for more than 15 seconds, the boiler is switched off automatically.

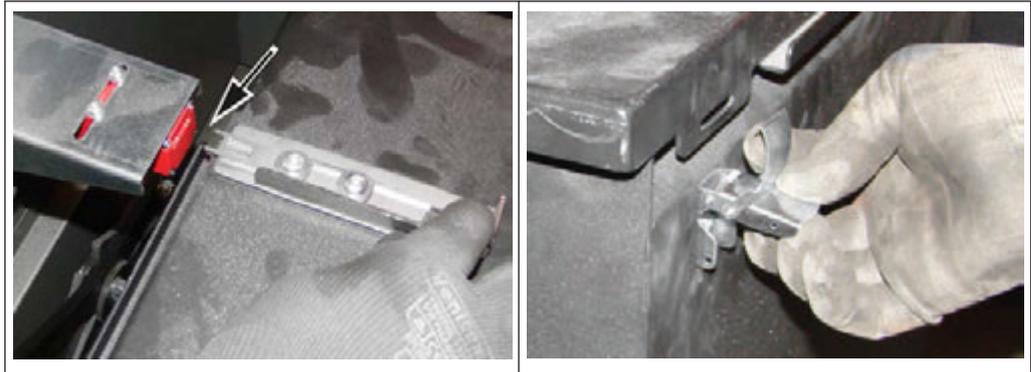

- Remove the key plate from the safety switch
- Open the side fasteners on the ash container
- Remove the ash container cover and check the level
- Replace the cover and close the side fasteners
 - If the container does not need emptying, slide the key plate back into the safety switch

If the container needs emptying, proceed as follows:


- switch off the boiler by tapping "Boiler off" at the mode icon



- Push the side lever up to release the ash container
- Pull out the ash container
- Push the coupling cap onto the ash container
- Take the ash container to the emptying point and empty it

- Check the fill level of the ash container in the heat exchanger and empty if required, ⇒ [See "Emptying the ash container" \[page 39\]](#)


To replace the ash container:

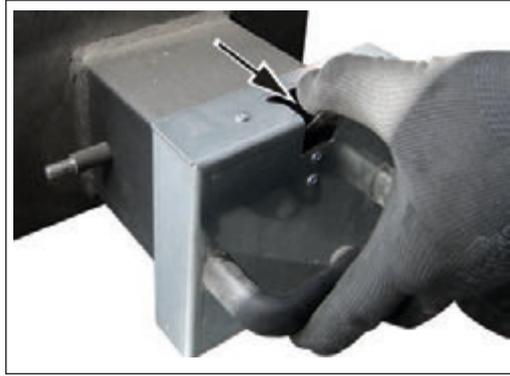

- Remove the coupling cap
 - Slide the upper flap forwards
 - To replace the ash container, follow the steps in reverse order

4.3.2 Emptying the ash container

Heat exchanger with ash screws

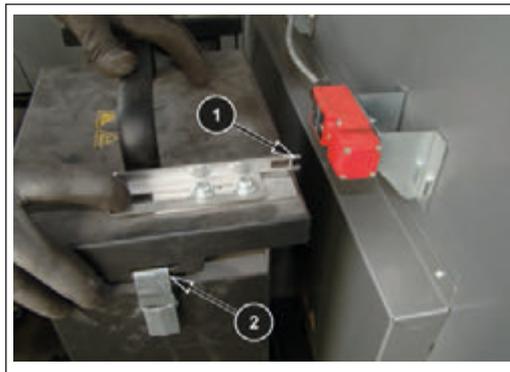

- Remove the key plate (1) from the safety switch
- Open the side fasteners (2) on the ash container
- Remove the ash container cover and check the level
- Replace the cover and close the side fasteners
 - If the container does not need emptying, slide the key plate back into the safety switch


If the container needs emptying, proceed as follows:



- Push the side lever up to release the ash container
- Pull out the ash container
- Push the coupling cap onto the ash container

- ❑ Take the ash container to the emptying point and empty it

To replace the ash container:

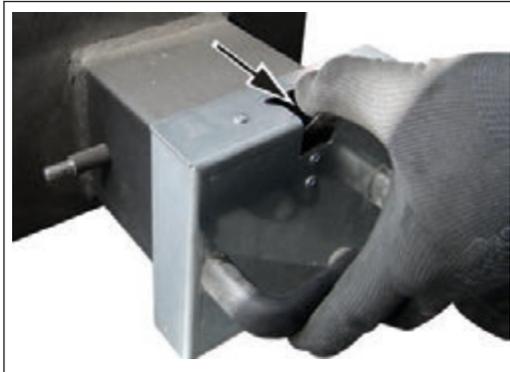

- ❑ Remove the coupling cap
 - Slide the upper flap forwards
- ❑ To replace the ash container, follow the steps in reverse order

For heat exchanger with ashcan



- ❑ Remove the star-shaped screws from the ashcan
- ❑ Take out the ashcan and empty the ash

- ❑ Replace the ashcan and tighten the star-shaped screws

4.3.3 Cleaning the combustion and burning chamber

WARNING




Inspection and cleaning work on a system which is operational:

Risk of serious injuries from automatic startup of the system and severe burns from hot parts and the flue gas pipe!


When working on the system:

- always wear protective gloves
- only operate the boiler using the handles provided
- switch off the boiler by tapping “Boiler off” at the mode icon
 - The boiler follows the shutdown procedure and switches to “Switched off Off” status
- switch off the main switch and take precautions to prevent accidental switching on
- allow the boiler to cool off for at least 1 hour
- once all of the tasks have been completed, turn the main switch back on and switch the boiler on in the desired mode

NOTICE! In order to avoid damage to the combustion chamber temperature sensor, it should be removed before starting work in the combustion chamber

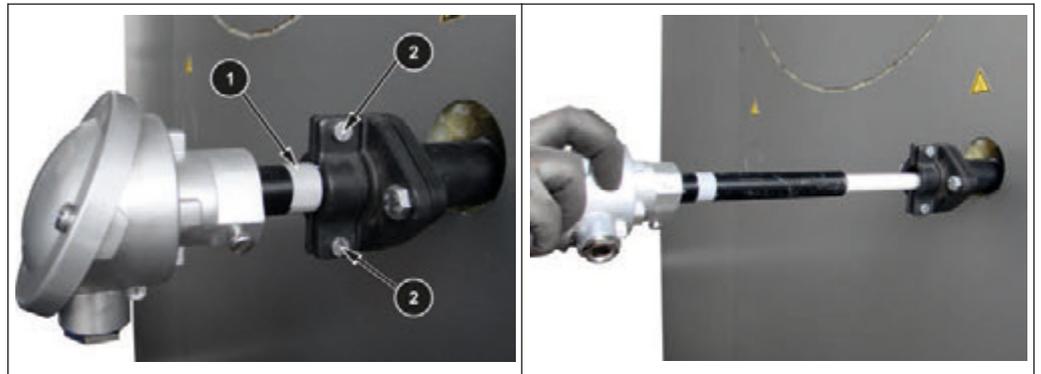

- Note the position of the combustion chamber temperature sensor (1)
 - e.g. with the help of sticky tape
- Loosen the screws on the bracket (2)
- Carefully remove the combustion chamber temperature sensor
 - if necessary, clean carefully
- When all tasks have been completed, replace the combustion chamber temperature sensor

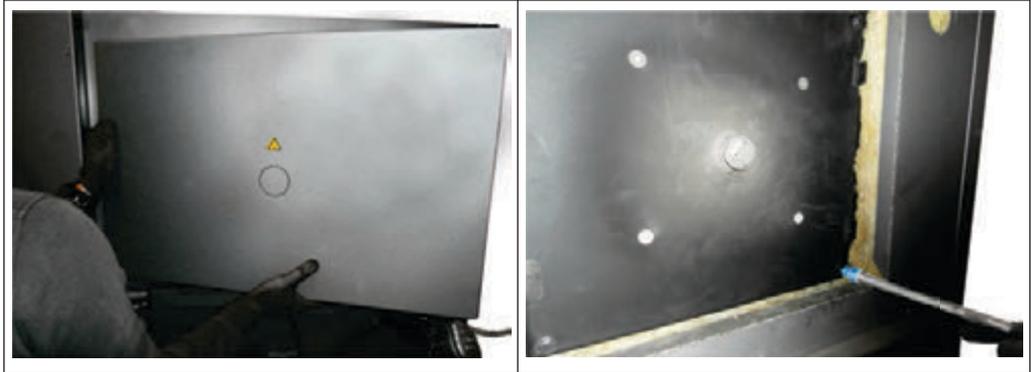Cleaning the burning chamber

- Removing the insulating cover (at the back of the boiler)
- Remove the cleaning cover



- Clean the side walls of the combustion space with the flat scraper
- Move the remaining ash down into the combustion chamber below with the flat scraper

Cleaning the combustion chamber

- Open the insulated doors
- Open the combustion chamber door




- Remove unburned material and foreign bodies from the combustion chamber
- Using a flat scraper, move the ash on the combustion chamber grate towards the ash shaft



- Remove any dirt (nails, stones, slag, etc.) from the moving grate
- Clean the primary air slot with a suitable tool (e.g. screwdriver)
 - The primary air slots must be free from obstructions!

- Turn on the main switch
- Activating the moving grate and ash removal screws in manual mode
 - Falling ash is moved into the ash container
- Empty the ash container whenever necessary
 - ⇒ See "Emptying the combustion chamber ash container" [page 38]

4.4 Periodic inspection and cleaning

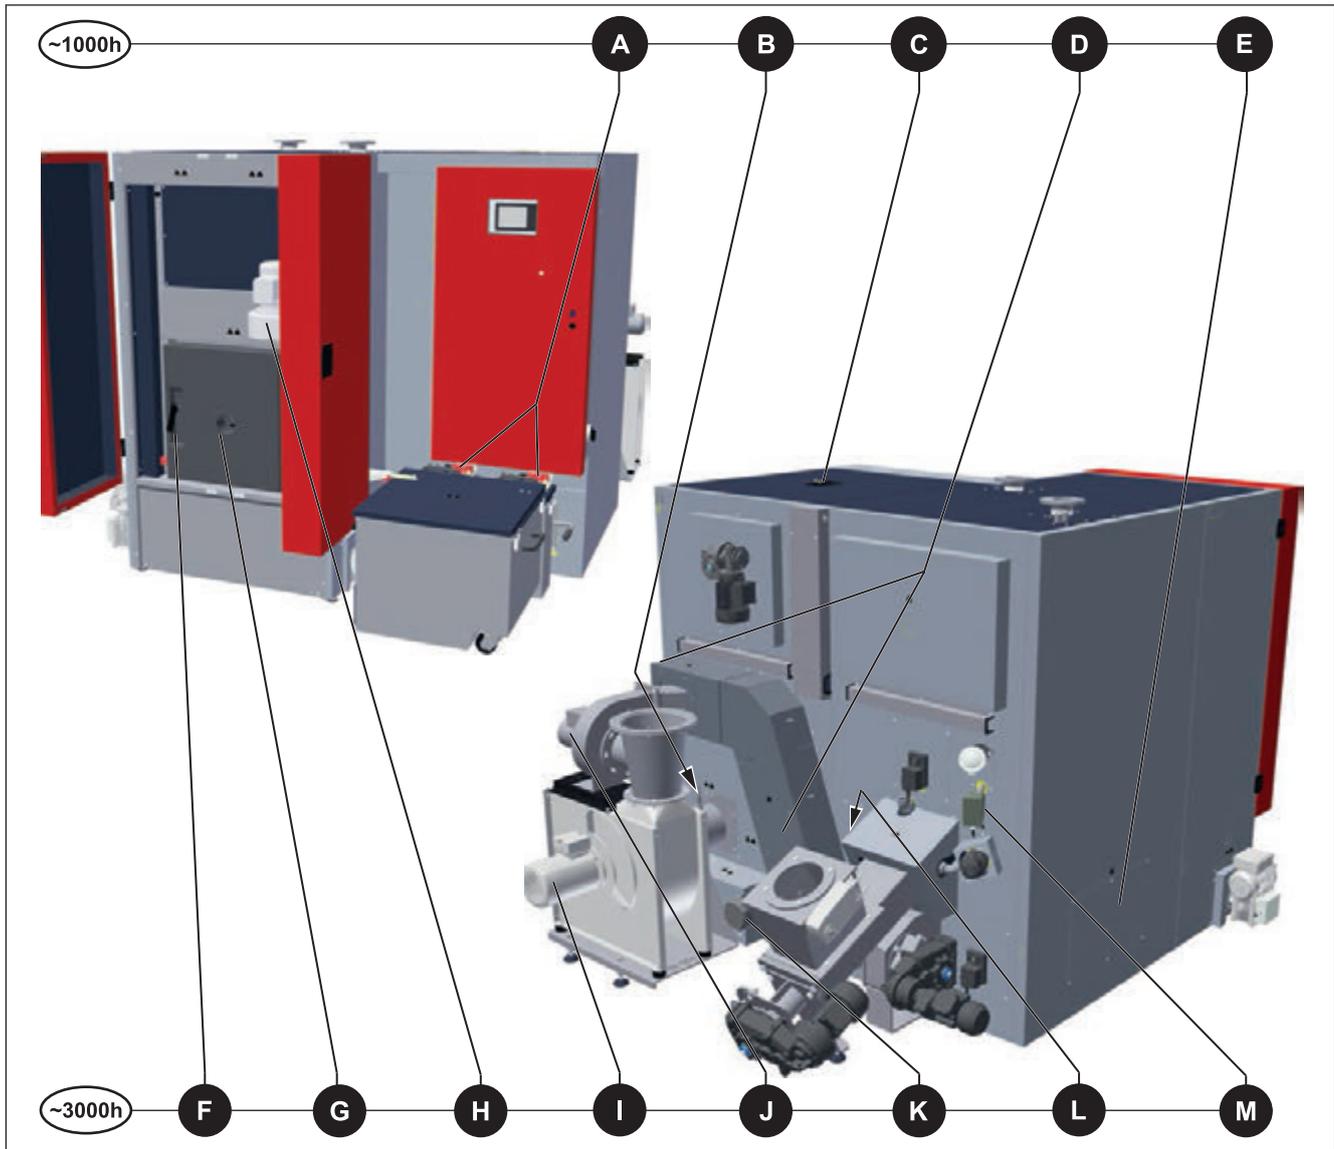

A ⇒ See "Cleaning the ash from the heat exchanger" [page 45]

B ⇒ See "Clean the broadband probe" [page 47],
⇒ See "Cleaning the flue gas temperature sensor" [page 47]

C ⇒ See "Cleaning the heat exchanger" [page 48]

F ⇒ See "Setting and checking the seal on the combustion chamber doors" [page 51]

G ⇒ See "Cleaning the fireclay elements" [page 54]

H ⇒ See "Cleaning the combustion air blower fan" [page 55]

I ⇒ See "Cleaning the induced draught fan" [page 55]

D ⇒ See "Cleaning the flue gas recirculation (FGR) duct (optional)" [page 48]

E ⇒ See "Cleaning the area under the moving grate" [page 49]

J ⇒ See "Cleaning the FGR blower fan (optional)" [page 56]

K ⇒ See "Checking the heat exchanger ash removal drive" [page 57]

L ⇒ See "Checking the underpressure controller" [page 57]

M ⇒ See "Checking the combustion chamber overpressure sensor" [page 57]

4.5 Periodic inspection and cleaning (approx. 1,000 hrs)

For fuels with a low ash content, cleaning and inspection after approx. 1,000 service hours is usually sufficient (under normal use conditions, approximately every quarter). For less efficient fuels and fuels with a high ash content (indicated by short emptying intervals for the ash container), the work should be carried out correspondingly more frequently.

⚠ WARNING



Inspection and cleaning work on a system which is operational:

Risk of serious injuries from automatic startup of the system and severe burns from hot parts and the flue gas pipe!

When working on the system:

- always wear protective gloves
- only operate the boiler using the handles provided
- switch off the boiler by tapping “Boiler off” at the mode icon
 - The boiler follows the shutdown procedure and switches to “Switched off Off” status
- switch off the main switch and take precautions to prevent accidental switching on
- allow the boiler to cool off for at least 1 hour
- once all of the tasks have been completed, turn the main switch back on and switch the boiler on in the desired mode

4.5.1 Cleaning the ash from the heat exchanger

(Pos. A ⇒ See "Periodic inspection and cleaning" [page 44])

Heat exchanger with ash screws

- Remove both ash containers from the heat exchanger and clean where necessary ⇒ See "Emptying the ash container" [page 39]



- Remove both ash removal flanges



- Remove dirt and deposits from the side walls and from the ash screws.
 - Always ensure there is a slight ash cover on the screws to protect them against the high temperatures to which they are exposed.
- Check the ash removal seal and replace if necessary
- Check the heat exchanger for damage (cracks, etc.)

For heat exchanger with ashcan

- Remove both ashcans
 - Emptying the ash container in the heat exchanger



- Remove deposits from the side walls
- Check the ash removal seal and replace if necessary
- Check the heat exchanger for damage (cracks, etc.)

4.5.2 Clean the broadband probe

(Pos. B ⇒ See "Periodic inspection and cleaning" [page 44])


- Unscrew the broadband probe
 - CAUTION: broadband probe may be hot!



- Remove dirt with a soft brush
 - Tip: to remove all the dirt, use an ash vacuum afterwards
 - CAUTION: Do not use sharp objects or compressed air to clean the broadband probe
- Screw in the broadband probe once more by hand

4.5.3 Cleaning the flue gas temperature sensor


(Pos. B ⇒ See "Periodic inspection and cleaning" [page 44])

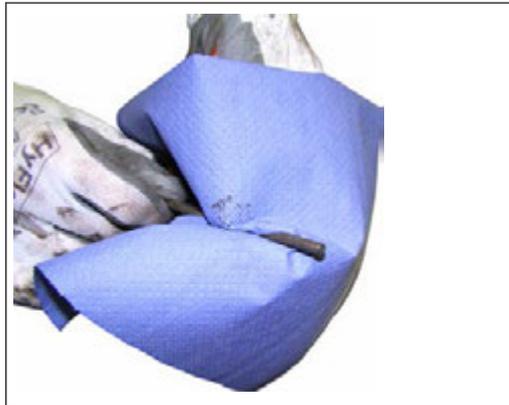

- Loosen the retaining screw and pull out the flue gas temperature sensor
- Wipe the flue gas temperature sensor with a clean cloth
- Insert the flue gas sensor back into the flue gas temperature gas pipe and finger-tighten the retaining screw

4.5.4 Cleaning the heat exchanger

(Pos. C ⇒ See "Periodic inspection and cleaning" [page 44])

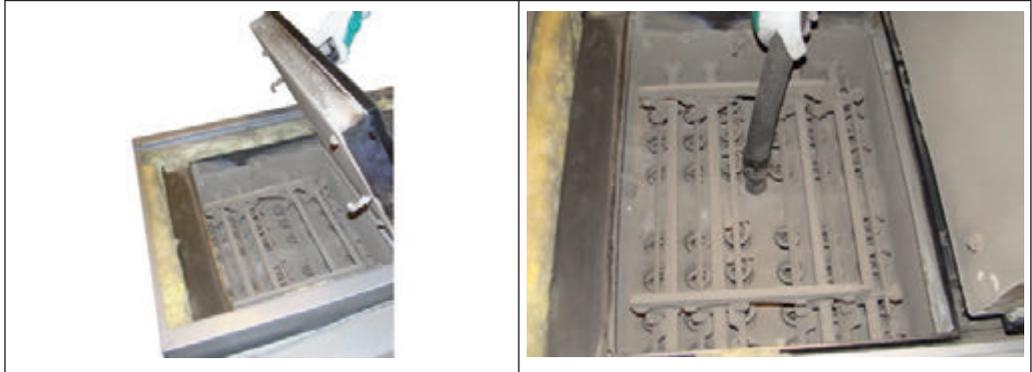


- Lift off the insulating cover and open the heat exchanger cover
- Check that the automatic heat exchanger cleaning system operates smoothly (stroke: approx. 5 cm)
- Vacuum bearings where necessary
- If necessary, pull the entire system out of the heat exchanger pipes and then clean the pipes and the turbulators with a brush and/or an ash vacuum.

4.5.5 Cleaning the flue gas recirculation (FGR) duct (optional)

(Pos. D ⇒ See "Periodic inspection and cleaning" [page 44])



- Remove the side cover plate from the FGR duct
- Remove the cleaning cover from the FGR duct

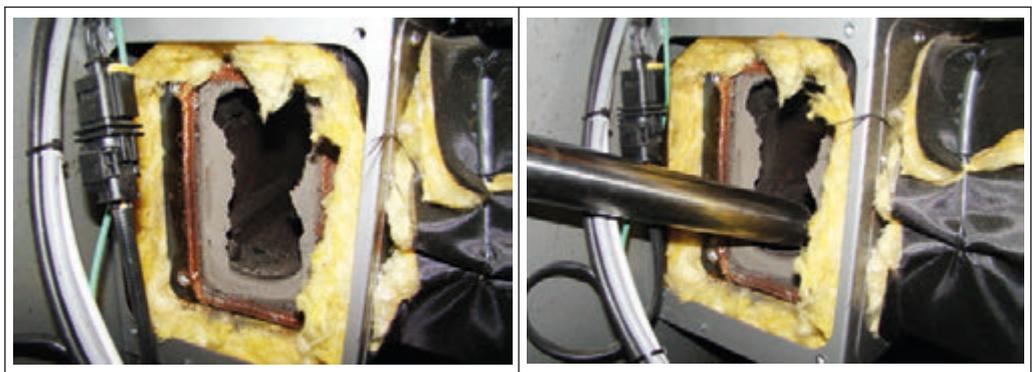

- Check the FGR duct and clean if necessary
 - Tip: use an ash vacuum!




- Remove the back cover plate from the FGR duct
- Remove the thermal insulation
 - Where necessary, cut the thermal insulation carefully using a knife




- Remove the cleaning cover
- Check the FGR duct and clean if necessary
 - Tip: use an ash vacuum!

4.5.6 Cleaning the area under the moving grate


(Pos. E ⇒ See "Periodic inspection and cleaning" [page 44])

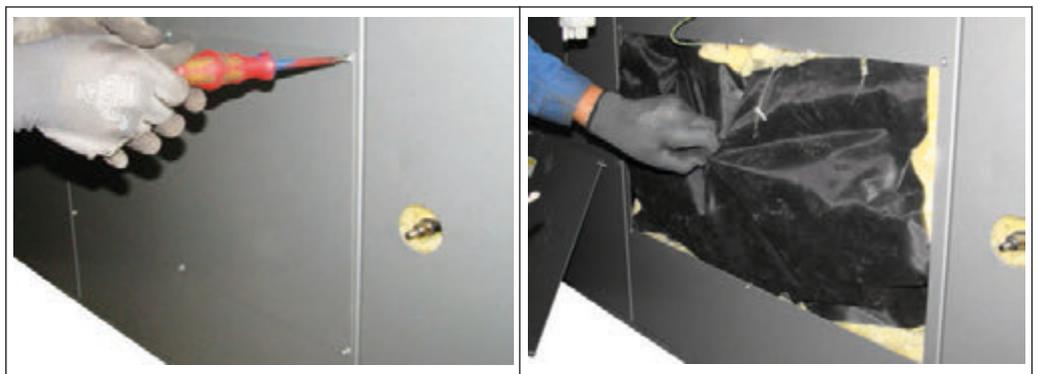

- Remove the cover plate
- Remove the thermal insulation

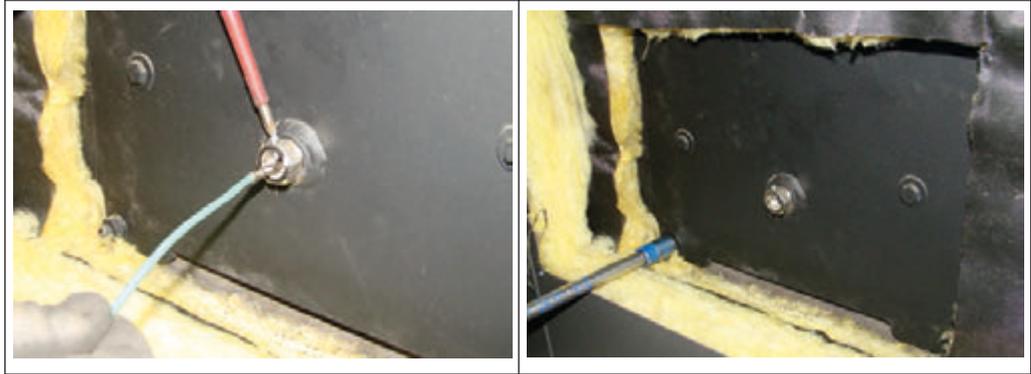

- Loosen the screws on the sensor and take out the sensor
- Loosen the nuts on the cleaning cover

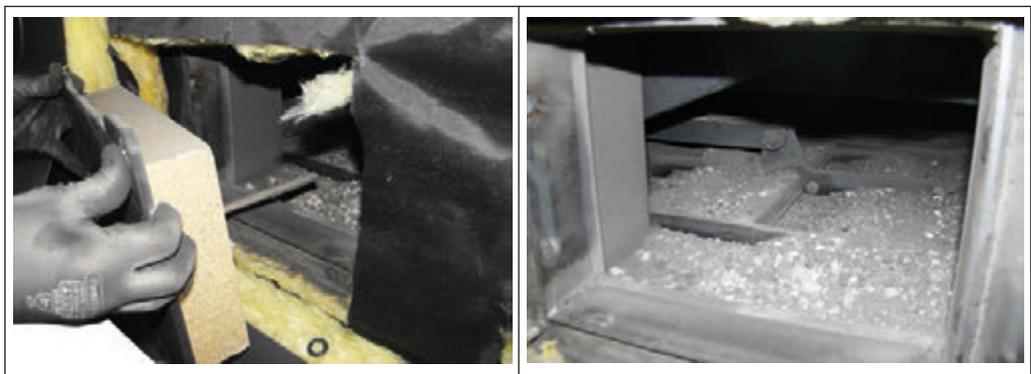

- Remove the cleaning cover
- Check the moving grate area and ash rakes for dirt and deposits. Clean where necessary
- Check the grate, grate shafts and grate bearings for wear and deformation
 - Exchange components wherever necessary
- Check the grate drive for dirt and deposits and ensure it operates smoothly
- Check the seal on the cleaning cover

4.6 Periodic inspection and cleaning (approx. 3,000 hrs)

For fuels with a low ash content, cleaning and inspection after approx. 3,000 service hours is usually sufficient (under normal use conditions, approximately once a year). For less efficient fuels and fuels with a high ash content (indicated by short emptying intervals for the ash container), the work should be carried out correspondingly more frequently.

WARNING



Inspection and cleaning work on a system which is operational:

Risk of serious injuries from automatic startup of the system and severe burns from hot parts and the flue gas pipe!

When working on the system:

- always wear protective gloves
- only operate the boiler using the handles provided
- switch off the boiler by tapping "Boiler off" at the mode icon
 - The boiler follows the shutdown procedure and switches to "Switched off Off" status
- switch off the main switch and take precautions to prevent accidental switching on
- allow the boiler to cool off for at least 1 hour
- once all of the tasks have been completed, turn the main switch back on and switch the boiler on in the desired mode

4.6.1 Setting and checking the seal on the combustion chamber doors

(Pos. F ⇒ See "Periodic inspection and cleaning" [page 44])

NOTICE! The seals must be replaced if they have turned black!

Checking the settings of the door stop



- Close the door
 - Slight resistance at a gap of 2 - 3 cm:
correct setting
 - No resistance or very slight resistance:
setting must be corrected - push the hinge toward the back
⇒ See "Adjusting the combustion chamber doors" [page 53]
 - Resistance at a gap of >3 cm:
setting must be corrected - push the hinge toward the front
⇒ See "Adjusting the combustion chamber doors" [page 53]

Checking the settings of the door handle

- Close the door
 - If the door can be opened with the usual force: correct setting
 - If the door cannot be opened with the usual force or must be forced open: push the locking plate toward the front
 - ⇒ See "Adjusting the combustion chamber doors" [page 53]

Checking the door stop seal

- Open the door
- Insert a sheet of paper at both the top and the bottom area of the door stop between the door and the boiler
- Close the door
- Try to pull out the sheets of paper
 - If the paper cannot be removed: the seal is correct
 - If the paper can be removed: the door is not sealed properly - push the hinge toward the back!
 - ⇒ See "Adjusting the combustion chamber doors" [page 53]

Checking the door handle seal

- Open the door
- Insert a sheet of paper at both the top and the bottom area at the side of the door handle between the door and the boiler
- Close the door
- Try to pull out the sheets of paper

- If the paper cannot be removed:
the seal is correct
- If the paper can be removed:
the door is not sealed properly - push the locking plate toward the back!
⇒ See "Adjusting the combustion chamber doors" [page 53]


4.6.2 Adjusting the combustion chamber doors

Door handles



- Loosen the lock nuts at the top and bottom of the locking plate using an Allen key
- Use suitable tools (e.g. screwdriver and hammer) to move the locking plate to the rear or the front as needed
 - Caution: the locking plate and/or hinge must be aligned in the same way at the top and bottom!
- Tighten the nuts at the top and bottom

Door stop side

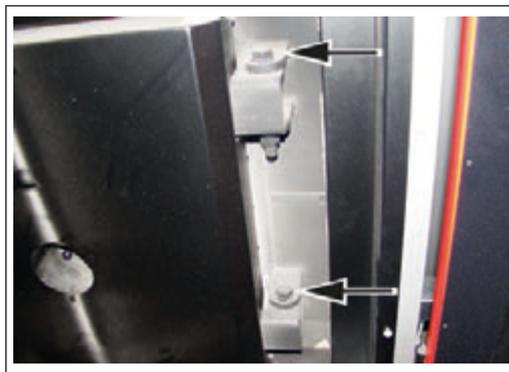


- Loosen the lock nuts at the top and bottom of the hinge using an Allen key
- Use suitable tools (e.g. screwdriver and hammer) to move the hinge to the rear or the front as needed
 - Caution: The hinges must be aligned in the same way at the top and bottom!
- Tighten the nuts at the top and bottom

4.6.3 Cleaning the fireclay elements

(Pos.G ⇒ See "Periodic inspection and cleaning" [page 44])

NOTICE! In order to avoid damage to the combustion chamber temperature sensor, it should be removed before starting work in the combustion chamber

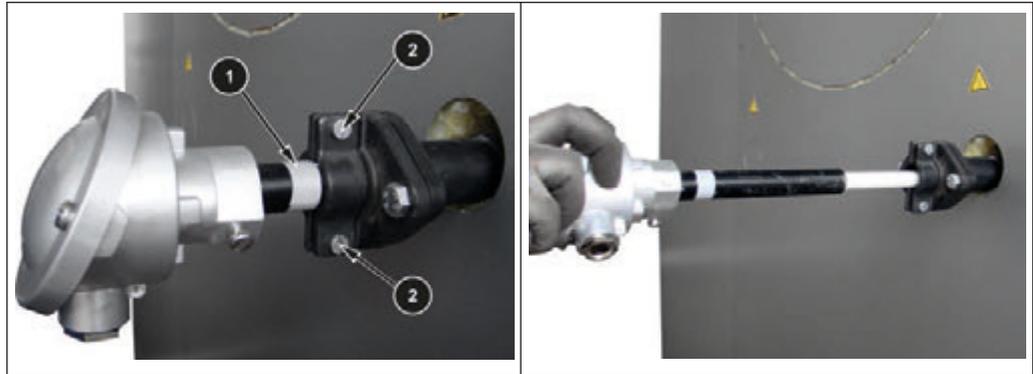

- Note the position of the combustion chamber temperature sensor (1)
 - ↳ e.g. with the help of sticky tape
- Loosen the screws on the bracket (2)
- Carefully remove the combustion chamber temperature sensor
 - ↳ if necessary, clean carefully
- When all tasks have been completed, replace the combustion chamber temperature sensor



- Open the insulated and combustion chamber doors
- Clean the fireclay elements at the side and top carefully with a cleaning brush
- Check the fireclay elements for wear
- Remove any ash which has fallen down.
 - ⇒ See "Emptying the combustion chamber ash container" [page 38]

4.6.4 Cleaning the combustion air blower fan

(Pos. H ⇒ See "Periodic inspection and cleaning" [page 44])



- Clean any dust and deposits from the protective grating
- Remove the protective grating and clean the fan with a soft brush where necessary

4.6.5 Cleaning the induced draught fan

(Pos. I ⇒ See "Periodic inspection and cleaning" [page 44])




- Mark the position of the flange
- Loosen the screws on the flange




- Take out the blower fan and clean the blower wheel with a brush
- Check the seal and replace if necessary
- Replace the blower fan
 - Check the marking on the flange!

4.6.6 Cleaning the FGR blower fan (optional)


(Pos. J ⇒ See "Periodic inspection and cleaning" [page 44])

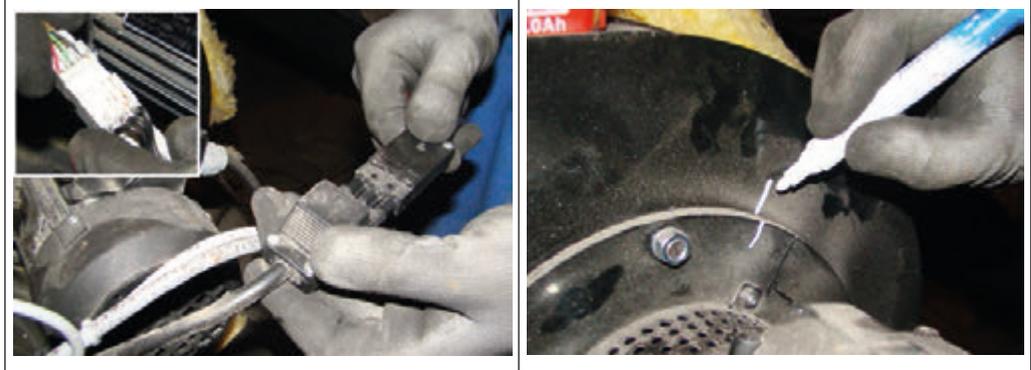

- Unplug the AGR cable
- Mark the position of the flange

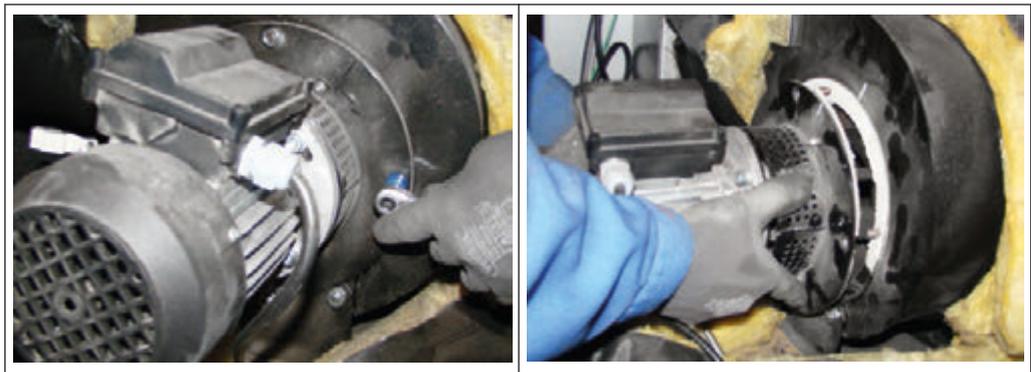

- Loosen the screws on the flange
- Remove the blower fan

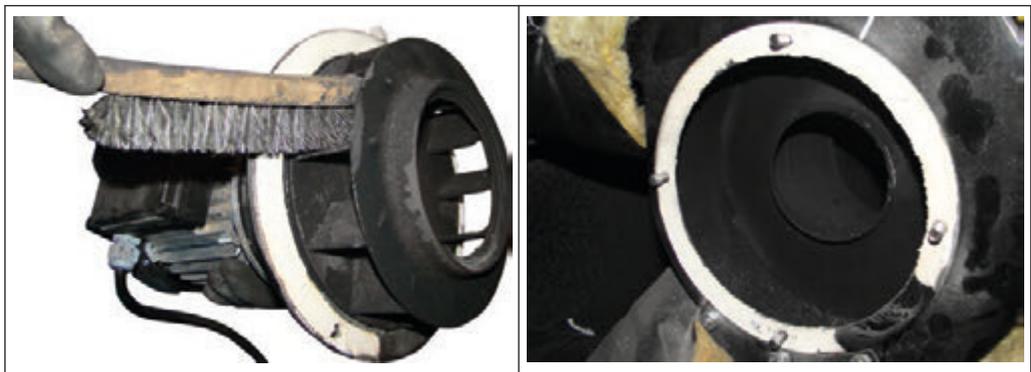

- Clean the blower wheel with a brush
- Check the seal and replace if necessary

- Replace the blower fan
 - Check the marking on the flange!

4.6.7 Checking the heat exchanger ash removal drive

(Pos. K ⇒ See "Periodic inspection and cleaning" [page 44])

- Remove the cover
- Grease the chain drive and check for wear
- Check the chain tension and adjust where necessary

4.6.8 Checking the underpressure controller

(Pos. L ⇒ See "Periodic inspection and cleaning" [page 44])



- Disconnecting the silicone hose from the differential pressure transducer
- Using compressed air, blow out the hose in the direction of the combustion space to remove any deposits
- Connect the silicone hose to "Minus"

4.6.9 Checking the combustion chamber overpressure sensor

(Pos. M ⇒ See "Periodic inspection and cleaning" [page 44])



- Loosen the retaining screw
- Pull the combustion chamber excess pressure sensor out of the spacer tube
- Clean the sensor with a fine cloth
- Check that the spacer tube is clear
- Insert the combustion chamber excess pressure sensor and fix loosely with fixing screws

4.6.10 Lubricating the bearings

- Grease the bearings of the screws and the drives at the correct points.

4.6.11 Checking the flue gas pipe

- Check the flue gas pipe and chimney
- Where necessary, remove any deposits using a cleaning brush
 - Always use stainless steel brushes to clean stainless steel flue pipes, chimney pipes and connections!

4.7 Maintenance instructions for hydraulic system



WARNING

Do not use unskilled personnel for hydraulic system maintenance

Risk of injury and damage to property!

Take the following precautions:

- Only allow trained professionals to carry out servicing and maintenance work on the hydraulic system. Follow the manufacturer's operating instructions.

NOTICE! Do not allow the oil temperature to exceed +50°C or fall below -30°C.

The interval at which oil should be changed depends on a variety of factors including the age of the oil and the amount of dirt contained in it. As a general rule, the oil should be changed at the following intervals:

Interval [service hours]	Component / Maintenance Operation
50 – 100	ONE-TIME maintenance after first commissioning: <input type="checkbox"/> Change the oil and the filter
50	<input type="checkbox"/> Check the oil level ➤ The oil must show no visible signs of foaming <input type="checkbox"/> Check the tightness of screw connectors
200	<input type="checkbox"/> Check the return filter for dirt (pressure gauge on filter) <input type="checkbox"/> Change the filter cartridge if necessary
5,000 (or yearly)	<input type="checkbox"/> Change the oil <input type="checkbox"/> Change the return filter and the vent filter sets

Recommended procedure for oil change:

- Move all hydraulic cylinders to the end stop
 ➤ This will expel all the oil
- Drain off or pump off the oil from the hydraulic unit
- Remove the unit cover or open the inspection cover
- Thoroughly clean the oil tank (make sure you remove all oil sludge)
- Change the return filter and the vent filter sets
- Refit the unit cover or close the inspection cover
- Fill the tank with hydraulic oil to the level mark shown on the inspection glass
☞ Use the hydraulic oil grade specified by the manufacturer
- At the other end of the cylinder plunger (relative to its current position), disconnect the hydraulic cylinder hose on the fixed piping side. Place a container under the disconnected hose.
- Using the hydraulic unit move the cylinders to the other end position
 ➤ The remaining old oil will be pushed out of the hose and into the container
- Refit the hydraulic hoses and check the seal
- Bleed the hydraulic system and check the oil level

4.8 Emissions measurement by chimney sweep or regulatory body

Various legal regulations stipulate that heating systems must be inspected periodically. In Germany this is regulated by the First Federal Emissions Protection Ordinance (BimSchV) in the last amended version, and in Austria by various state laws. It is important to ensure that the boiler is clean and that there is adequate heat consumption on the day of the measurement. (e.g. the storage tank must be able to take heat for the duration of the measurement).

For further information and the procedure for measuring emissions, see the attached cleaning instructions "Preparation for measuring emissions".

4.9 Maintenance agreement / Customer service

NOTICE! We recommend a yearly inspection by Froling customer services or an authorised partner (third party maintenance).

Regular maintenance and servicing by a heating specialist will ensure a long, trouble-free service life for your heating system. It will ensure that your system stays environmentally-friendly and operates efficiently and cost-effectively.

In the course of this maintenance the entire system is inspected and optimised, particularly regulation and control of the boiler. The emission measurement carried out can also be used to draw conclusions about the combustion performance of the boiler.

For this reason, FROLING offers a service agreement, which optimises operating safety. Please see the details in the accompanying guarantee certificate.

Your Froling customer service office will also be happy to advise you.

NOTICE

All national and regional regulations relating to regular testing of the system must be observed. Please be advised that, in Austria, commercial systems with a rated heat output of 50 kW or more must be regularly tested at yearly intervals in accordance with the Heating Plant Regulations (Feuerungsanlagen-Verordnung).

4.10 Replacement parts

With Froling original replacement parts in your boiler, you are using parts that match perfectly. As the parts fit together so well, installation times are shortened and a long service life is maintained.

NOTICE

Installing non-original parts will invalidate the guarantee.

- Only replace components or parts with original replacement parts

4.11 Disposal information

4.11.1 Disposal of the ash

- The ash should be disposed of in accordance with waste management regulations.

4.11.2 Disposal of system components

- Ensure that the system is disposed of in an environmentally friendly way in accordance with waste management regulations.
- You can separate and clean recyclable materials and send them to a recycling centre.
- The combustion chamber must be disposed of as builders' waste.

5 Troubleshooting

5.1 General faults in the power supply

Error characteristics	Cause of error	Elimination of error
Nothing is shown on the display	General power failure	
No power to the controller	Main switch is turned off FI-protective circuit breaker, power line protection or SPS power line protection tripped	Turn on the main switch Switch on the protective circuit breaker

5.1.1 Behaviour of system after a power failure

When the power supply has been restored, the boiler returns to the previous mode and is controlled according to the specified program.

- After a power failure, check whether the STL (high-limit thermostat) has tripped.
- Keep the doors of the boiler closed during and after the power failure, at least until the induced draught fan automatically starts up again.

5.2 Excessive temperature

The high-limit thermostat (STL) shuts down the boiler when it reaches a temperature of 95 - 100°C. The pumps continue to run.


Once the temperature falls to below approx. 85°C, the STL can be reset mechanically.

- Unscrew the cap on the STL
- Unlock the STL by pressing with a screwdriver




5.3 Faults with fault message

If a fault has occurred and has not yet been cleared:

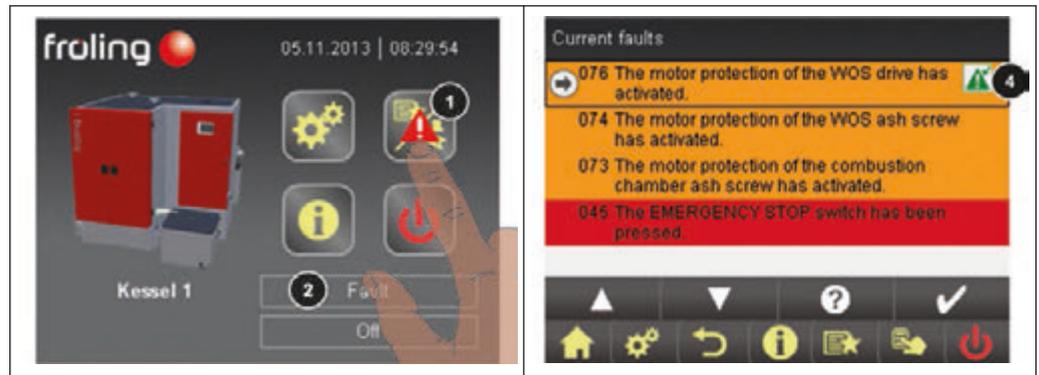

- A warning symbol (1) flashes in the Quick menu
- In case of a fault/alarm, the operating status “Fault Off” (2) is displayed
- ☐ Navigate to the error display using the Quick menu
 - The current fault list is displayed:

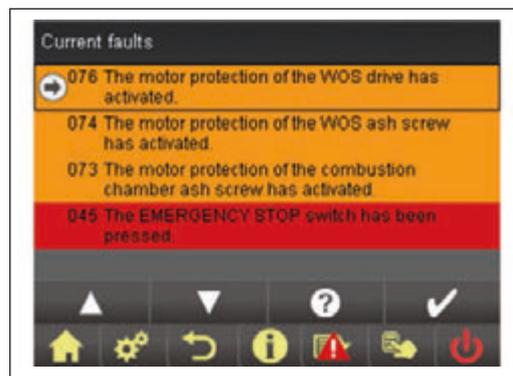

The term “fault” is a collective term for warnings, errors and alarms. The boiler reacts differently to the three types of message:

Type of fault	Character	Boiler behaviour
WARNING	<ul style="list-style-type: none"> ▪ YELLOW warning sign ▪ Message with YELLOW background 	In case of warnings the boiler initially continues controlled operation, giving the option of resolving the error quickly to prevent a shutdown.
ERROR	<ul style="list-style-type: none"> ▪ ORANGE warning sign ▪ Message with ORANGE background 	The boiler follows the shutdown procedure and remains in "Switched off Off" status until the problem is resolved.
ALARM	<ul style="list-style-type: none"> ▪ RED warning sign ▪ Message with RED background 	An alarm triggers a system emergency stop. The boiler shuts down immediately, the heating circuit controller and pumps remain active.


5.3.1 Procedure for fault messages

Troubleshooting and fault messages
See operating instructions SPS 4000

5.3.2 Acknowledging a fault message

Trace and remove the fault and then:

- Call up the current fault list (Quick menu / Error display)

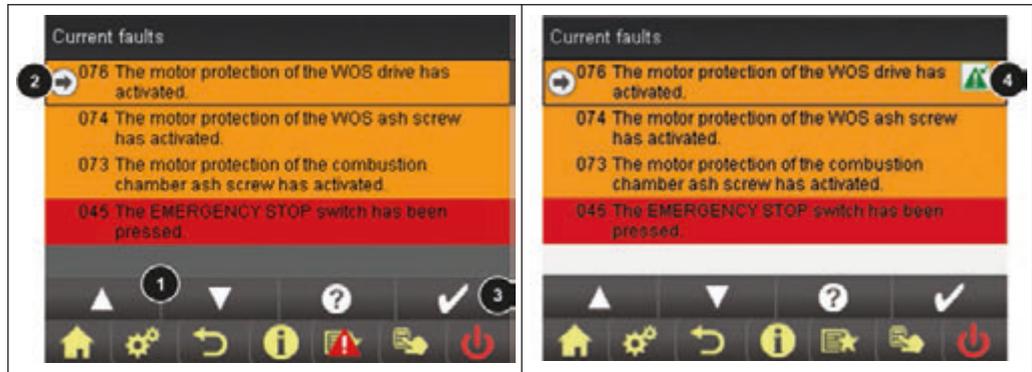

- Use the up/down arrow (1) to navigate to the current fault
 - The selected fault is indicated by an arrow symbol (2)
- Acknowledge the current fault by tapping the check mark (3)
- A symbol (4) appears once the fault has been acknowledged
 - Once all faults have been fixed and acknowledged, all warning symbols disappear from the starting page

6 Appendix

6.1 Addresses

6.1.1 Address of manufacturer

FRÖLING
Heizkessel- und Behälterbau GesmbH

Industriestraße 12
A-4710 Grieskirchen
AUSTRIA

TEL 0043 (0)7248 606 0
FAX 0043 (0)7248 606 600
INTERNET www.froeling.com

6.1.2 Address of the installer

Stamp